




AIRCONDITIONERS - MONTAGE UND HANDHABUNGSHINWEISE

Um eine richtige Funktion des Airconditioners zu erreichen, befolgen Sie bitte nachstehende Montagehinweise. Sollten Sie Fragen zu diesem System haben, zögern Sie nicht Ihren RMF Systems Lieferanten uns zu kontaktieren. Im Bedarfsfall oder bei Sonderanwendungen nehmen Sie mit uns direkt auf.

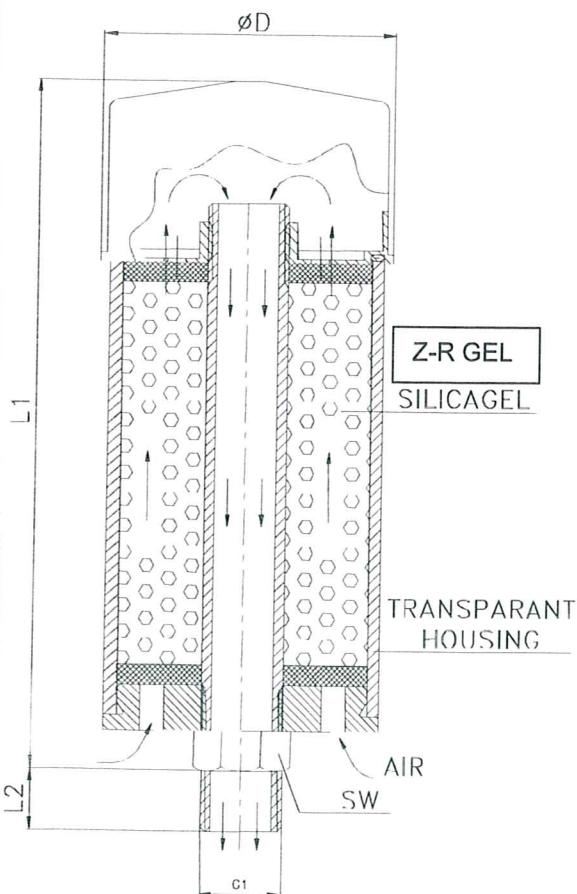

1. Anschluß an ein Hydrauliksystem

- entfernen Sie den Plastikstopfen aus dem Gewinderohr / Anschluß Tank
- entfernen Sie die Kunststoffolie am Gehäuseboden des Airconditioners
- montieren Sie den Airconditioner direkt an den Behälter, benutzen Sie RMF Bodenplatten und Zubehör für Ihre Verbindungen
- Bei Platzproblemen oder auch anderer notwendiger Positionierung des Airconditioner verwenden Sie einen flexiblen Schlauch für die Verbindung

2. Sättigungsanzeige durch den Farbwechsel des Granulates

Das Granulat ist gesättigt, wenn die Farbe von Rubin Rot in Orange gewechselt hat. Spätestens zu diesem Zeitpunkt sollten Sie das Granulat tauschen. Die Cremefarbenen Anteile des Granulates wechseln nicht die Farbe

3. Abmessungen


	KL93R	ACL 93	KL96R	ACL 96	KL121R	KL122R
D	98	98	98	98	130	130
L1	160	150	220	210	280	380
L2	20	##	20	##	30	30
G1	G3/4" male	G3/4" female	G3/4" male	G3/4" female	G11/4" male	G11/4" male
SW	32	##	32	##	50	50

Das Wechseln des Granulates erfolgt durch Demontage des Airconditioner und in Folge durch auskippen des verbrauchten Granulates. Zu diesem Zweck wird der Filterkopf abgeschraubt. Danach erfolgt die Neubefüllung durch ZR Granulat aus dem Nachfüllbehälter. Der Filterkopf sollte zu einem festen Intervall oder spätestens bei einem Signal der Unterdruckanzeige (wenn vorhanden) gewechselt werden.



AIRCONDITIONERS INSTALLATION AND OPERATING INSTRUCTIONS

To secure optimum efficiency from your RMF airconditioner, we recommend you carefully read and follow the instructions below. Should you have any queries, contact your RMF Systems supplier or

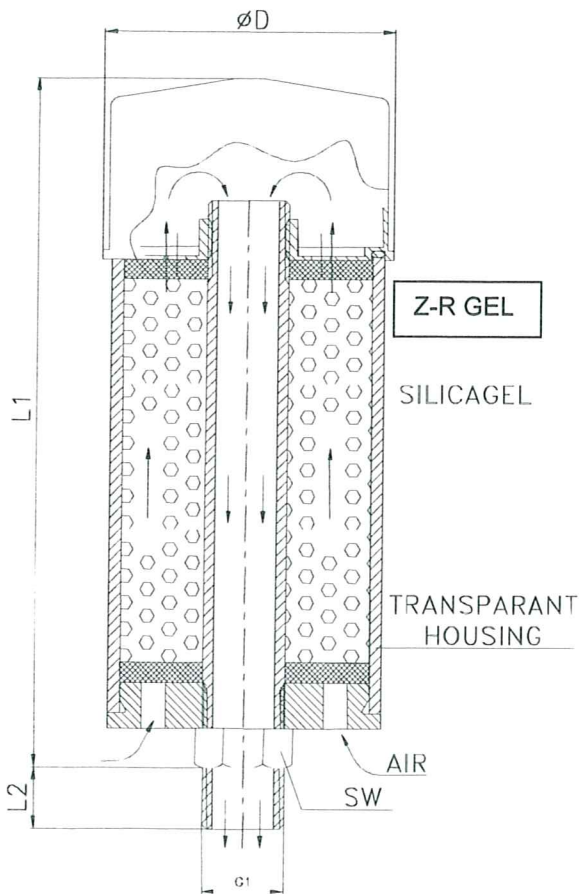

- Hydraulic connection
 - remove the plastic plug from the steel tube
 - remove the folio at the bottom of the product
 - mount the air conditioner direct on the reservoir, use an RMF base plate adapter or other accessories
 - in shortage of space a flexible hose can be used for mounting the airconditioner
- Hygroscopic indication

As moisture is absorbed, **Z-R gel** granules will gradually change colour from a deep red to orange.
When the granules have become orange, replace them. Remember the white granules do not change colour
- Dimensions

	KL93R	ACL 93	KL96R	ACL 96	KL121R	KL122R
D	98	98	98	98	130	130
L1	160	150	220	210	280	380
L2	20	##	20	##	30	30
G1	G3/4" male	G3/4" female	G3/4" male	G3/4" female	G11/4" male	G11/4" male
SW	32	##	32	##	50	50

Changing the Z-R gel should be done by de-mounting the air conditioner. Unscrew the yellow filter cap and remove the grey foam. Then pour out the used Z-R gel. Refill the air conditioner with the new (red) Z-R gel, replace the foam and mount the yellow filter head again.

NOTE: The yellow filter head should be changed after a pre-set service interval or, when mounted, after indication of the filter minder.